

# Hue Tonto

<https://www.zigbee2mqtt.io/devices/929003823101.html>

## Pair

New lights are automatically in pairing mode. Factory resetting a Hue light can be accomplished in 6 ways which are described below. After resetting the light will automatically connect.

## Reset

- In Hue App löschen
- Mit Lichtschalter
  - Repeat 5 times, starting with the bulb on:  
Turn off for 2 seconds, turn on for 8 seconds  
The light will pulse when factory reset and allow joining on Z2M

From:

<https://www.drklipper.de/> - **Dr. Klipper Wiki**

Permanent link:

[https://www.drklipper.de/doku.php?id=haussteuerung:zigbee2mqtt:hue\\_tonto](https://www.drklipper.de/doku.php?id=haussteuerung:zigbee2mqtt:hue_tonto)

Last update: **2025/10/25 10:58**

